

English



emporia
25
YEARS
THE ORIGINAL

Thank you for purchasing a product emporia!

Please read through the instruction manual before using the phone in operation. The English description see page 02.

emporiaCOMFORT
Simplify your communication.®


Eveline Pupeter, emporia Telecom
www.emporia.eu



› YOUR MOBILE PHONE AT A GLANCE

- 1 **Speaker**
- 2 **Display (screen)**
- 3  **Answer/OK key**
 - Start or accept a call
 - In the menu: Confirm selection
 - On standby: Access **Call info**
- 4  **Arrow keys**
 - Flick through **Contacts** and menu
 - When the phone is on standby, press  to call up the menu.
 - When the phone is on standby, press  to access **Contacts**.
- 5  **Hang up / Back / Delete key**
 - When in a call: End
 - When in the menu: One step back
 - When entering digits or letters: Delete
- 6  **Quick dial keys**
- 7  **key (mailbox)**
- 8  **On/Off key**
- 9 **Torch**
- 10 **Port for USB charging cable**
- 11 **Headset port**
- 12  **Emergency button**
- 13 **Speaker**
- 14  **Torch button**

15  **Camera button**

16 **Handset volume controls**  & 

17 **Battery cover**

› **Symbols on the screen**

 Network signal strength

 Roaming (abroad)

 Battery indicator

 Missed call

 Call forwarding

 New message

 Profile: Silent/Sleep mode

 Profile: Maximum/Bus mode

 Profile: Meeting/Theater mode

 Alarm clock on

 Bluetooth activated

 Bluetooth connected

› **SYMBOLS ON THE EXTERNAL DISPLAY**

Symbols are only visible when the phone is closed and disappear when it is opened.

05:47 Time

NAME Incoming call

 Missed call

 New message

 Battery low

 Battery charging



505 Emergency call

 07:45 Alarm clock

ZzZz Snooze




1. GETTING STARTED

› Inserting a SIM card

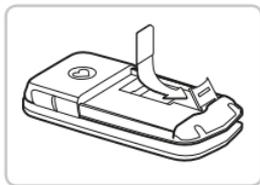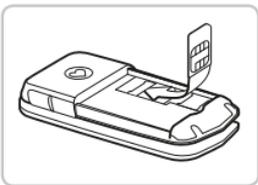

- Remove the battery cover.
- Slide the SIM card into the SIM card holder with the gold contacts facing down.
- Slide your data card into the card holder with the gold contacts facing down.

› Inserting and charging the battery

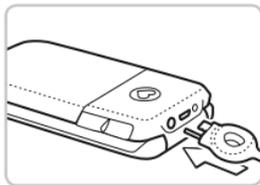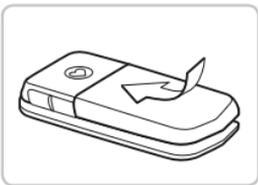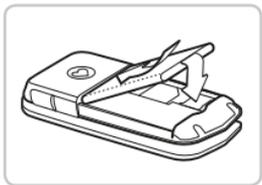

- Insert the battery, making sure that the battery contacts touch the phone's gold contacts.
- Slide the battery cover into its position over the battery. You will know it is in the correct position when you hear it click into place.
- Plug the charging cable into the USB port on the top of the phone.

! *Attention: Charge the battery for at least four hours before the first time you use it. Only use batteries and chargers that are permitted for use with this specific model.*

› Turning on the phone

- Pressing the  key for at least two seconds switches the phone on.
- To turn the phone off, press the  key for two seconds again.

› Using a new SIM card for the first time:

Enter the four-digit PIN code (personal identification number)

⇒ Press  to confirm the code

 *The PIN code is a four-digit number that is intended to prevent somebody else from being able to switch on your mobile phone. You have a maximum of three attempts to enter the correct number. If you enter the wrong number three times in a row, you will only be able to unblock the SIM card with the PUK code. You will find the PIN code and PUK code in the documents supplied by your network operator.*

⇒ Select a **Language** by pressing  and  ⇒ 

⇒ **Set time** ⇒ 

⇒ **Set date** ⇒ 

⇒ Select a **Text size** by pressing  and :

You can choose **Small** or **Large** ⇒ 

› Saving energy

If a few seconds pass without the phone receiving any input from you, the screen will go blank to save energy. In the event of an incoming call or you pressing any key, the screen will automatically light up again.

2. USING THE PHONE

In standby mode the phone is on, but is not running any applications (calls, SMS messages, etc.).

› Using the menu

Press  to open the menu.

- Press  and/or  to flick through the menu items.

At the top of the screen, the menu item currently highlighted will be displayed.

- Press  to open a menu item.
- Menu items can be selected directly using the digits assigned to them.
- Options which you can select by pressing  or  are displayed at the bottom of the screen.
- To return to standby mode, press  several times or close the phone.

› Dual-function keys

Some keys have additional functions if they are pressed and held down for a few seconds:

 **key:** Listen to mailbox

 **key:** + for country code, e.g. +49 for Germany

 **Torch button:** Torch on continuously when the phone is on

3. CALLS

› Incoming call

- To answer: Open the phone.
- To reject: Press  or close the phone.
- To mute the ringtone temporarily:
Press the  button (on the side of the phone).

› Ending a call

Press  or close the phone.

› Dialling a number

Enter the number (incl. area code) you want to dial using the keypad. ⇒ Start the call by pressing .

› Redialling

When the phone is on standby, press  to call up your call history.

⇒ Press  and  to select a number.

⇒ Start the call by pressing .

› Hands-free mode

Press  during a call to open the Options and turn the hands-free function on or off.

4. SMS MESSAGES

- › Menu items: **Write message, Received, Unsent, Sent, Delete messages, Templates, Blocked numbers for messages, Send contact by SMS, SMS in PhoneBK, Message settings**

- › **Writing a message**

 ⇒ **Messages** ⇒ **Write message**

Enter text using the keypad.

- › **Writing using predictive text**

Predictive text has been activated on your phone at the factory.

- Press the number key displaying the letter you require once (e.g. press  for **i**).
- Once you've pressed several keys, words will automatically be suggested.
- One word will be highlighted in white.
If this is the word you require, you can insert it simply by pressing , which is also used to insert blank spaces.
- If the word you require is not highlighted, you can use the arrow keys,  and/or , to move between the suggested words.
When the word you require is highlighted, confirm your selection pressing the spacebar key .

› Writing without predictive text

If you don't want to use predictive text, turn it off by pressing

Predictive text input in the **Settings** menu.

To input text without predictive text, press the respective number key the required number of times for the letter you need.

(E.g. 2x , 1x , 3x , 3x  and 3x  for Hallo)

The symbols available vary according to which language you are using.

› Input method

Press  to change the input method.

abc ⇒ Lower case only

Abc ⇒ Upper and lower case

ABC ⇒ Upper case only

123 ⇒ Digits

› Sending a message

Options ⇒ **Send to** ⇒ Enter a number or open Contacts by pressing **Search**.

› Receiving a message

Received messages are indicated by an audio signal and the  symbol.

- Press  to open a received message immediately.
- To view your message list, select **Messages** ⇒ **Received**.

5. CAMERA AND PHOTO ALBUM

Your phone has a camera. You will find photos you have taken in the menu under **Photo album**.

› Taking a photo

In standby mode, enable the camera by pressing 

When the camera is enabled:

- Press  to take a photo.
- Press  to open **Options** for the camera.

Available options: **Self-timer, Effect, Size, Quality** and **Night mode**

› Photo album

Your photos will be saved in the **Photo album** menu.

- Press  and/or  to flick through the photo album.
- Press  to open **Options** for the selected picture.

Available options: **View, Send, Wallpaper, Contact photo, Rename, Delete, Delete all** and **Memory**

 *You can connect your phone to a PC using the USB data cable and transfer your photos.*

 *You can use a data card to increase the storage capacity of your phone. You can purchase these cards from electronics stores.*

6. TOOLS

- › Menu items: **Alarm clock, Birthday reminder, Calendar, Calculator, Camera, Bluetooth**

6.1 Alarm clock

- **Setting the time**

Enable the alarm clock ⇒ Enter the time ⇒ Confirm by pressing .

The alarm clock will now go off at the time you have set every day.

- **Off:** Disable alarm clock
- Switch off the ringing alarm clock by pressing .
- Mute the alarm by pressing  or 
(it will ring again after five minutes).

6.2 Bluetooth

This function allows you to use Bluetooth-enabled hands-free kits wirelessly.

- **Bluetooth on/off**
- **Connect** ⇒ **Search for new devices**

Search for devices you want to connect

⇒ Select devices by pressing .

Devices that have been connected before will be recognised and connected automatically.

- **Manage devices** ⇒ **Visibility** ⇒ **On**

Make your phone visible so that

it can connect to a Bluetooth device.

7. CONTACTS

- › Menu items: **Search name, Add contact, Edit contact, Delete, Send contact by SMS, Copy contact, My number, Speed dial keys, Emergency numbers, Phone book settings and SMS in PhoneBK.**

- › **Saving contacts (name and number)**

 ⇒ **Contacts** ⇒ **Add contact**

⇒ Enter name and number

⇒ **Contact photo:** Select Yes or No

Save each new entry by pressing .

- ›  *Always save names and numbers with the international dialling code, e.g. save +41 for Switzerland, +43 for Austria and +49 for Germany.*

- › **Searching for contacts:**

 ⇒ **Contacts** ⇒ **Search name**

⇒ Press  and  to flick through the entries

or enter the first few letters of the entry you're looking for using the keypad (and continue flicking with  if necessary).

⇒ Once you've selected an entry, press  to start a call.

› **Speed dial keys**   

You can assign quick dial keys to numbers you call often.

• **Saving a quick dial key**

⇒ Press one of the quick dial keys

⇒ Enter a **name** and **number** or

Search for a contact in the phone book.

• **Changing or deleting a quick dial key**

⇒ Open the menu item **Speed dial keys** in the **Contacts** menu.

⇒ Select a quick dial key and change or delete its link to a particular contact.

8. SETTINGS

- › Menu items: **Silent/Sleep mode, Sound & alert, Handset volume, Handsfree volume, Display & light, Time & date, Language, Text size, Predictive text input, Camera settings, Call waiting, Call forward, Auto Pickup, Suppress number, Help texts, Network selection, Voicemail number, Emergency numbers, Emergency button, Security settings, Phone book settings, 0000 to enter Settings, Master reset**

8.1 Sound & alerts

You can personalise the settings for tones, signals and vibration or select a set of predefined settings (profile).

- › **Silent/Sleep mode**

Visual notifications only (torch LED flashes, notifications on the external display), no ringtone, no vibration function

- › **Meeting/Theater mode**

Visual notifications (torch LED flashes, notifications on the external display), device vibrates, no ringtone

- › **Maximum/Bus mode**

Key tones, SMS tone and vibration function activated, ringtone volume is set on maximum

8.2 Key tones

Specify whether or not you would like the phone to make an audible signal (click, tone or voice announcement) when a key is pressed.

 *The voice announcement function will only work if English or German has been selected as the phone language.*

8.3 Auto Pickup

Incoming calls are answered immediately when you open your phone. You can change this setting here.

8.4 Voicemail number

Enter the number for your mailbox.

You will find this number in the documents supplied by your network provider.

Press and hold the  key to listen to your mailbox.

8.5 Security settings

- **PIN:** PIN request on/off, change PIN
- **Phone code:** on/off, change (factory preset code: 1234)

8.6 Master reset

You can restore all the factory settings on your phone (factory preset code: 1234).

9. EMPORIA EMERGENCY CALL FUNCTION

Read the instructions carefully and set the emergency call function according to your needs.

You can save up to five emergency numbers (family members, friends and official institutions).

- In an emergency press and hold the emergency button on the back of the phone. (This works even when the phone is closed.)
- The five preset numbers will be dialed automatically in the order you have saved them in. The phone will go through a list of five numbers a maximum of three times.
- At the same time as each emergency call, a text message (SMS) will be sent to the contact, saying:

"You are about to receive an emergency call. An audible warning signal will sound when you answer the call. Please press the 0 key three times to establish the connection."

 *The contact must press the 0 key three times within 60 seconds, or the call will be disconnected (to prevent your emergency call going through to a contact's mailbox).*

- From the moment you make an emergency call, your emporia phone will automatically answer any incoming calls for one hour. To disable this function, press and hold the  button for approx. three seconds or turn your device off completely using the  button and then turn it on again.

-
- To cancel the emergency call, press and hold .
 - During the emergency call, a warning tone will sound continuously, to alert anyone nearby and the person being called.
 - If you do not have any emergency numbers saved, have no credit on your prepaid phone card or are connected to a foreign network without permission (e.g. roaming is not activated), 112 will be dialled when you press the emergency button.

 *If you want to add the number of an official institution such as the police or fire brigade as an emergency number, you must check that this is okay with the respective institution beforehand. We do not assume liability for any costs incurred through you calling such an institution by mistake.*

➤ **Adding/editing emergency numbers**

In the **Settings** menu ⇒ **Emergency numbers**

⇒ **Add emergency number**

⇒ Select an entry (e.g. **EmNo. 1**) by pressing  

⇒ Select **Ok** by pressing 

⇒ Select **Private** or **Help organisation** 

⇒ Select a contact

➤ **Activating the emergency button**

In the **Settings** menu ⇒ **Emergency numbers**

⇒ **Emergency button** ⇒ **On/Off**

10. GUARANTEE AND SERVICE

› Safety information

- Turn off the phone in hospitals and whenever you are near medical equipment. There should always be a distance of at least 20cm between pacemakers and the phone when it is on.
- Never try to control a vehicle while holding the phone in your hand. Always comply with relevant national laws and traffic regulations.
- Turn off the phone whenever you are travelling in an aeroplane.
- The phone must be switched off whenever it is near a petrol station or other places with explosive substances.
- Never shine the LED torch in the eyes of people or animals! (Protection class 3)
- To prevent hearing impairments, do not use the phone on a high speaker volume for extended periods of time. Do not hold the phone to your ear when the hands-free mode is activated or the emergency button has been pressed.
- Using a headset on a high volume can cause hearing impairments. Check the volume of the headset you are using.
- The phone and the accessories may contain small parts. Keep the phone out of the reach of young children.
- As a precaution, we recommend disconnecting the phone from the charger during thunderstorms.
- The mains adapter serves as a separator between the product and your mains supply. The mains supply must be close to the device and easily accessible.



› **Warranty**

- This guarantee is only valid if the original batteries supplied by emporia have been used.
- Mobile phone: 24 months
- Battery: 6 months

› **Support**

• **Emporia Service Centre**

Industriezeile 36 · 4020 Linz · Austria · www.emporia.eu

- **Germany:** 0800 · 4004711
- **Austria:** 0732 · 7777 17 · 446
- **Switzerland:** 08484 · 50004

› **Intended use**

- This phone is robust and designed for mobile use. However, it still needs to be protected from moisture (rain, bathroom water, etc.) and heavy impacts.
- Do not leave it where it will be directly exposed to the sun.
- Using the phone for any purpose other than that described above will result in damage to the product. Doing this also entails hazards such as fire, electric shocks, etc. This product must not be changed or modified, and the casing must not be opened.
- The adapter is only suitable for use in conjunction with a standard household mains socket that is connected to your electrical grid and uses 100-240 volts/50/60Hz (10/16A) of alternating voltage.

› **Scope of delivery**

- Mobile phone
- Battery: Li-ion 3.7V / 1020mAh
- USB cable with USB AC adapter
- Charging unit

› Technical data

- Dual Band GSM 900/1800MHz
- Dimensions: 104 x 53 x 18,4 mm
- Weight: 84 g
- Battery: Li-Ion 3.7V/1020mAh (replaceable)
- Internal antenna: SAR 1.170 W/kg (body), 0.071 W/kg (head)
- Standby time: 280 hrs*
- Talk time: 350 min * (** Depending on network coverage and activated applications the battery life can be reduced.*)
- HAC: T4/M4

› Disposal

- Disposing of the packaging

The packaging and packaging aids are recyclable and should be made available for reuse.



- Disposing of the battery

Batteries should never be disposed of as domestic refuse! As a consumer you are legally required to return used batteries.

They can be handed in at one of your community's local collection points or at specialised stores.



- Disposing of the device

If this product ever wears out, please don't dispose of it as domestic refuse.

To ensure you don't cause damage to the environment, take it to a collection station or recycling centre where used devices are processed for recycling in an environmentally friendly manner.



11. DECLARATION OF CONFORMITY (DOC)

We, Emporia Telecom GmbH & Co.KG., Industriezeile 36, 4020 Linz, Austria, hereby declare that the construction of the device described in the following complies with the relevant EC directives stated below.

➤ **Item description: Dual Band Mobile Phone**

➤ **Item number: V66**

➤ **Relevant EC directives**

Directive 1999/5/EC on radio equipment and telecommunications terminal equipment (R&TTE Directive 1999/5/EC)

➤ **Harmonised EN basic and engineering standards**

- **Health:** EN 50360 (2001) +A1 (2012); EN 50566 (2013); EN 62209-1 (2006); EN 62209-2 (2010); EN 62479 (2010)
- **Safety:** EN 60950-1 (2006) +A11 (2009) +A1 (2010) +A12 (2011) +A2 (2013)
- **EMC:** ETSI EN 301 489-1 V1.9.2; ETSI EN 301 489-7 V1.3.1; ETSI EN 301 489-17 V2.2.1; EN 55022 (2010); EN 55024 (2010)
- **Radio spectrum:** ETSI EN 301 511 V12.1.1; ETSI EN 300 328 V1.9.1

Eveline Pupeter
emporia Telecom

CE 2200


18.08.2016, Linz, Austria

- DE Druckfehler, Irrtümer und technische Änderungen vorbehalten.
- EN Subject to mistakes, printing errors and technical changes.
- IT Con riserva di errori di stampa, inesattezze e modifiche tecniche.
- FR Toutes erreurs d'impression, erreurs et modifications techniques réservées.
- NL Drukfouten, vergissingen en technische wijzigingen voorbehouden.

