

emporiaELEGANCE

DEAR MOBILE PHONE USER!

Congratulations on your **emporiaELEGANCE** mobile phone!

To get you acquainted with your new mobile phone as quickly as possible, we have put together all the essential information on a few pages. The following pages of the user guide let you choose how much time you want to spend acquainting yourself with the most important functions of your mobile phone.

We hope you will have fun with your phone, and wish you all the best

EMPORIA Telecom

Eveline Pupeter

Management

Albert Fellner

PACKAGE CONTENTS:




Mobile phone
(emporiaELEGANCE)



Charging cable
(RL - V170EU)



Battery pack
(AK - V36)

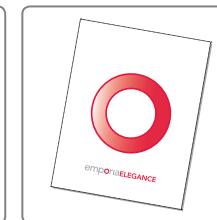

User guide

1 START

1.1 WHAT ARE ALL THE KEYS FOR?

Loudspeaker

Screen (= Display)

End Call/Back/Delete key 

- During a call: End call
- In the menu: one step back
- When entering numbers or letters: delete

Make or receive a call/OK-key 

- Dialling: Input the number, then press 
- Incoming call: answer
- In the menu: select
- In standby mode: Access to call list (dialled, received, missed)

Arrow keys  

- In standby mode access phone book with 
- Scroll through phone book and menu

Star key 

- Press and hold: last 10 numbers dialled
- Press twice: + (for country codes, i.e. +49 for Germany)
- Press 3 times: insert a dial pause
- When writing: special symbols (?!,@-+\$€ etc.)

0 Key / Voicemail key 

- Press and hold: listen to your voicemail
- When writing (SMS, phone book: insert a space)

Pound key 

- Press and hold: List of missed calls
- When writing: Switch from upper to lower case or numbers



On-off key 

To switch on and off: press for 2 seconds

Volume adjustment


- Change the receiver volume during a call
- If telephone rings: press  to turn off the ringer (it will ring again for the next call)

Key lock 

- Prevents accidental keypresses
- slide down to lock the keypad
- slide up to unlock the keypad



DISPLAY SYMBOLS

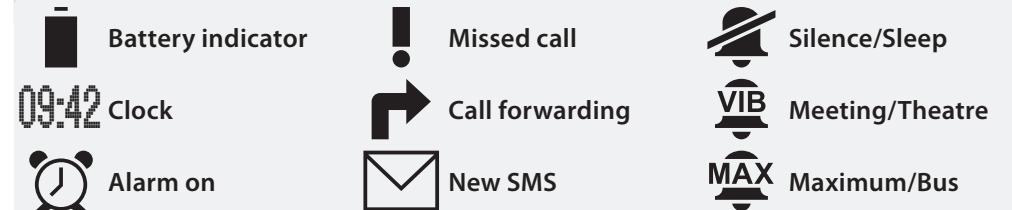



Flashlight key 

- Short keypress: lights up briefly
- 5 second keypress: lights up continuously
- Switch off: short keypress

CAUTION: Don't shine the light directly into the eyes of people or animals.

Silence/Sleep key 

Mute the telephone (ring tone, vibration, keypad tone, text message tone and confirmation tone off, alarm rings. *(See chapter 3.5)*

Menu key 

Selects the menu (call list, phone book, settings)

Alarm key 

- slide up to turn on
- slide down to turn off

Battery compartment

High performance Li-Ion battery



Signal strength



Roaming

If you are abroad, this symbol will replace the signal strength symbol to let you know that it is now more expensive to make a call.



Top 5

The most important numbers at the beginning of your contact list, independent of their alphabetical order. *(see section 4.3.4)*

TABLE OF CONTENTS

1 Start

1.1	What Are All the Keys for?	03
1.2	Inserting the SIM Card	10
1.3	Inserting the Battery	10
1.4	Charging the Battery	11
1.5	You Are Ready: Switching the Mobile Phone on.....	12
1.6	Deactivating the PIN prompt	13
1.7	Setting Date and Time	13

2 10 Minutes to Get to Know Your mobile Phone

2.1	Don't Worry if You Get Lost in the Menu	14
2.2	Making and Ending a Call	14
2.3	Dialling with the Key Pad.....	15
2.4	Hands-free	15
2.5	Redial.....	15
2.6	Dialling from the Phone Book	16
2.7	Battery Indicator and Signal Strength	16
2.8	Accessing Your Phone Book with SMS.....	17
2.9	Backlight time.....	17

3 20 Minutes for Easy Handling

3.1	Useful Functions on the Key Pad.....	18
3.1.1	 Key: Numbers Dialed.....	18
3.1.2	 Key: Missed Calls.....	18
3.1.3	 Key: Listen to Voicemail.....	18
3.1.4	 to  : Speed Dialling.....	18
3.1.5	 Key: Call List.....	18
3.2	Alarm.....	19
3.2.1	Turn Alarm On and Off.....	19
3.2.2	Set or Change Alarm Time.....	19
3.2.3	Switch Off Ringing Alarm.....	19
3.2.4	Snooze Function.....	20
3.2.5	Change Alarm Tone.....	20
3.3	Key Lock.....	20
3.5	On/Off Key.....	21
3.5	Silence/Sleep Key.....	21
3.6	Menu Key.....	21

4 30 Minutes for Pros

4.1	Enter Text with Key Pad	22
4.2	SMS Text Messages	24
4.2.1	Writing SMS	24
4.2.2	Sending SMS	25
4.2.3	Receiving SMS	26
4.2.4	Answering SMS	26
4.2.5	Deleting SMS	27
4.2.6	Sending a Contact Address via SMS	27
4.2.7	Creating and Inserting Templates	28
4.2.8	SMS Blacklist	29
4.2.9	SMS Confirmation	29
4.2.10	SMS Service Centre Number	29
4.3	Phone Book	30
4.3.1	New Entry: Saving Names and Numbers	30
4.3.2	Editing the Phone Book	31
4.3.3	Name Search	32
4.3.4	Top 5: The Most Important Numbers	33
4.3.5	Saving Telephone Numbers from the Call List or SMS	34
4.3.6	Phone Book Settings	35
4.3.7	Accessing the Phone Book with SMS	35
4.4	Settings	36
4.4.1	Silence/Sleep, Meeting/Theatre, or Maximum/Bus	36
4.4.2	De-activate PIN Prompt	37
4.4.3	Birthday Reminder	37
4.4.4	SMS into Phone Book	38
4.4.5	Phone Book Settings	38
4.4.6	Top 5: The Most Important Numbers	38
4.4.7	Voicemail Number	39
4.4.8	SMS Service Centre Number	39

5 MENU OVERVIEW40.

6 General instructions

6.1 Safety Instructions42
6.2 Warranty.....43
6.3 Correct Usage43
6.4 Disposal44
6.5 Technical Product Description and DOC44

7 FREQUENTLY ASKED QUESTIONS 46

1.3 INSERTING THE SIM CARD

You need a SIM card to use your phone. The SIM card (Subscriber Identity Module) is the small card with the clipped corner, which you got from your network provider. It serves as identification in the mobile phone network.

Insert the SIM card as follows:

1. Press the battery cover down.
2. Slide the cover a few millimeters down and take it off. Remove the battery pack (if present) by lifting it from the bottom and taking/pulling it out.
3. Insert the SIM card into the SIM card slot with the gold chip down and the clipped corner on the top left.

1.4 INSERTING THE BATTERY

4. The battery phone book must rest against the top gold phone book of your mobile phone.
5. Re-attach the battery cover to the phone with the two hooks pointing forward. Slide the cover under light pressure until it snaps into place.



1.5 CHARGING THE BATTERY

Please note: The battery included with your mobile phone should be charged for at least 4 hours before your first call.



1. Plug the power cord into an outlet.
2. Insert the charge cable into the socket on the bottom of the mobile phone.

When it begins charging, your mobile phone will display a large battery symbol. During the charging process, the bars of the battery indicator in the left upper corner of the screen will fill in. When the Battery is fully charged, you will see the **Battery Full** symbol.

3. Disconnect the charge cable from the mobile phone and from the power supply.

1.6 YOU ARE READY: TURNING THE MOBILE PHONE ON

Press the  key on the left-hand side of the mobile phone at for least 2 seconds. This will turn the mobile phone on.

When you turn on your phone for the first time, you will be prompted to select a display language: Using   move to the desired language and select it with . You may change your selection at any time later by using **Settings/Language** in the menu.

Now set the time and date as follows:

1. Using the key pad, or  , set the hour by using two digits (i.e.: "09" for 9 am) and **Continue** with  to set the minutes. If you made a mistake somewhere, go **Back** with .
2. Once you have set the minutes, **Save** these settings with .
3. Use the same procedure for setting the date.

You may change date and time anytime later by using **Settings/Time & Date** in the menu. (see section 1.8)

When first using a new SIM card, the 4 digit PIN code (personal identification number) must be entered. The PIN code is designed to prevent unauthorized activation of your mobile phone. However, it does not prevent someone else from using your phone once it is turned on.

Please refer to the documentation of your network provider for your PIN code (you received an information package with your SIM card).

- Enter the PIN code with the key pad and select it with .
- Any mistakes while entering may be deleted with .

We recommend de-activating the PIN code. (see section 1.7)

1.7 DE-ACTIVATING THE PIN CODE PROMPT

To prevent problems caused by forgetting the PIN code (personal identification number), we recommend to de-activate the PIN prompt. However, this is not possible with all network providers.

1. Press the  key on the right hand side of the phone.
The screen will display the menu.
2. Use  to navigate to **Settings** and select it with .
3. Navigate to **PIN Prompt** by repeatedly pressing  and select it.
4. Select **Off** using . (If the **Off** option background is not already dark, navigate there by pressing  to select it)
5. The PIN prompt appears. Enter the PIN code on the key pad and select it using .
6. Go back to standby mode using . The PIN prompt is now deactivated.

1.8 SETTING DATE AND TIME

1. Press the  key on the right hand side of the phone.
The screen will display the menu.
2. Use  to navigate to **Settings** and select it with .
3. Use  to navigate to **Date & Time** and select it with .
4. Use  to select **Set Time**.
5. With the key pad or with   set the time using two digits (i.e. "09" for 9 am) and save it using .
6. With the key pad or with   set the minutes using two digits and save it using . The display will show **Time Set**.
7. Use  to navigate to **Set Time**, and select it with .
Proceed as with **Set Time**.

2 10 MINUTES TO GET TO KNOW YOUR MOBILE PHONE

2.1 DON'T WORRY IF YOU GET LOST IN THE MENU

Whenever you have “really” lost your way in the menu, you can always get out of a tight spot by pressing  repeatedly. This will always return you to the familiar look of the screen in standby mode.

- When the mobile phone has not been used for 10 seconds, the screen will turn off. The mobile phone is then in energy saving mode, but remains ready to receive calls.
- Just press any key once to re-activate the screen.

2.2 RECEIVING AND ENDING CALLS

If a call is received, the phone will ring and vibrate. The  key and the flashlight blink, and number and name (if saved in phone book) of the caller will be displayed.

- Receive a call by pressing .
- To end a call press . If the caller hangs up first, this is not necessary.
- To reject a call when it rings, press .
- If you don't want to reject the call, but also don't want the ringing to continue (you are sitting in a waiting room), press the VOL  key. The ringer is muted for the present call (but will ring again for the next one).

2.3 DIALLING WITH THE KEY PAD

ALWAYS enter the telephone number together with the area code.

(Example: enter "049789789" for number 789789 with area code 049.)

- Press  to connect.
- End the call by pressing . If the other caller hangs up first, you don't need to press .

2.4 HANDS-FREE

1. While making a call, press  to open the call menu.
2. Use  to navigate to **H-free** and select it by pressing .
3. To change back, select **H-free** from the call menu.

2.5 REDIAL

1. Press the  key to show previously dialled, missed or received calls.
2. Use   to scroll through the call list.
3. Press  to call selected numbers. (see also section 3.2.1.)

2.6 DIALLING FROM THE PHONE BOOK

Saved names and numbers are listed alphabetically in the phone book.

1. Press  in standby mode: Phonebook will be displayed.
2. Use   to navigate to the desired entry.
3. Press  to call.

Please note: To save yourself entering new telephone numbers into the phone book, you can have them sent to you. See section 2.8.

Please note: alphabetical search, see section 4.3.3.

Please note: you may store your 5 most important numbers at the beginning of your phone book list, independent of the alphabetical ordering, see section 4.3.4.

2.7 BATTERY INDICATOR AND SIGNAL STRENGTH

In standby mode the battery status is displayed on the upper left. When the battery charge drops below 25 % (4 bars indicate 100 %), and the warning light flashes, charge the battery with the charge cable. (see section 1.4)



In standby mode you will see the signal strength displayed on the upper right. If it drops below 25 % (4 bars indicate 100 %), reception and sound quality will be impaired. Try to find a location with better signal strength.

2.8 ACCESSING YOUR PHONE BOOK WITH SMS

You can send telephone book entries by text message, using the following format:

#Name#Number# → Example: #Tobias#01509876543#

- The telephone number has to be entered including the area code.
- It is, however, recommended to save all numbers in international format with the international country code. *Example of a German international number: #Tobias#+491509876543#*

When the text message is received the telephone number is automatically saved in your telephone book.

Note: If your text message memory is full no telephone book entries can be received by text message. Delete existing text messages in order to free up memory space. See chapter 4.2.5.

If, however, you do not desire to use this function, go to **Settings** via the Menu or the Text Message Menu, select Enter **SMS to Phonebook** and switch it **OFF**. (Also see chapter 4.4.4)

2.9 BACKLIGHT TIME

In the menu, under **Settings / Energy saving / Backlight time**, you can set the backlight to shut off after 2, 5, 10, 20, or 30 seconds. Shorter backlight settings use less energy.

If the backlight is off (screen is dark), press any key to turn it on again. Even if you just opened a particular menu item and the screen went dark – don't worry! Pressing a random key will only restore the backlight without changing what you were doing before.

3 20 MINUTES FOR EASY HANDLING

3.1 USEFUL FUNCTIONS OF THE KEY PAD

3.1.1 * Key: Numbers Dialed

1. * 3 second keypress: The list of most recently dialed numbers will be displayed with date and time signature
2. Use   to scan the list
3. Press  to call the selected number.

3.1.2 # Key: Missed Calls

1. # 3 second keypress: The list of missed calls will be displayed with date and time signature
2. Select the desired number using  .
3. Call the number by pressing .

3.1.3 0 Key: Listen to Voicemail

Press and hold the  key to connect to your voicemail.

3.1.4 1 to 5: Speed Dialling

Press and hold the respective key ( to ) to call the most important telephone numbers. See section 4.3.4.)

3.1.5 Key: Call List

This shows your most recent calls (dialed, missed, received) with date and time.

1. Press  to see the call list.
2. Use   to scroll through the list.
3. Press  to call the selected number.

3.2 ALARM

Your mobile phone is equipped with an alarm.

3.2.1 Turning the Alarm On and Off

- To turn the alarm on, move the  slide key on the right hand side of the phone down, and select the alarm time with .
- To turn it off, move the slider  up again.

3.2.2 Setting and Changing Alarm Time

1. Move the  slide key down. If the alarm is turned on already ( slide key is down) slide it quickly up and then down again. The display will show the alarm time screen.
2. Using the key pad or the   keys, enter the hours using two digits (i.e."07" fro 7 am) and press  to continue to setting the minutes.
3. Using the key pad or the   keys, enter the minutes using two digits and save them by pressing . After the confirmation message, the mobile phone will return to standby mode. The alarm symbol is displayed on screen.

3.2.3 Shutting Off the Ringing Alarm

- If the alarm is ringing, you may turn it off by pressing . The alarm will come on again at the same time the next day.
- If no keys are pressed, the alarm will ring every 3 minutes for a total of 90 minutes.

Please note: Turning off the alarm by moving the sliding side key will not silence the alarm.

3.2.4 Snooze Function

To be awakened or reminded again after 5 minutes, select **Later** with the  key while the alarm is ringing. You may repeat this as often as you like. Otherwise shut off the alarm by pressing .

3.2.5 Changing the Alarm Tone

Settings / Tones & Signals / Alarm Tones lets you select the alarm tone you wish to be woken up by.

Please note: If you choose an alarm tone clearly different from your ring tone there is less chance of confusing the two.

3.3 KEY LOCK

To avoid accidental keypresses (for instance in your pocket) you can lock the key pad.

- If you move the  slide key on the left hand side of the mobile phone down, the key lock is engaged. The screen displays a large key symbol and the current time.
- To turn the key lock off, slide the  key up again.

Please note: Incoming calls can be received as usual with . If you want to reject the call, you must first unlock the keypad (move the  slide key up, then reject call with )

3.4 ON/OFF - BUTTON

To switch the mobile phone on or off hold the - button on the left-hand side of the mobile phone for 2 seconds.

3.5 SILENCE/SLEEP - BUTTON

You can mute your mobile phone using the  button.

(Ring tone, vibration, keypad tone, text message tone and confirmation tone off; alarm rings)

If you switch **Silence/Sleep** back off again then you set the phone back to your previous settings.

To ensure that you do not forget to deactivate the **Silence/Sleep** function (e.g. after a concert) and it is therefore not possible to reach you, you can simply set after what period of time (1-24 hours) the ring tone of the phone should automatically be switched back on (= deactivate mute).

3.6 MENU - BUTTON

With the  button you can access the menu points: Text message, Telephone book, Call list, Settings

4 30 MINUTES FOR PROS

4.1 ENTERING TEXT WITH THE KEY PAD

You may enter numbers and letters with the key pad. Every key represents several signs, depending on how often you press the key.

You may delete or change signs in the entered text later on.

- The vertical line „|” shows your current position.
- You can change your position by using the   keys.
- By pressing and holding   you jump one line up and down at a time.

Available signs and functions.

 → .,?!'":@:1	 → m n o ö	 → .,?!'":;()@-+\$€£¥#%*&~=α and Greek letters
 → a b c 2 ä à	 → p q r s 7 β	 → Change between upper and lower case and key pad („Abc“ „ABC“ „123“ „abc“)
 → d e f 3 è	 → t u v 8 ü	
 → g h i 4	 → w x y z 9	
 → j k l 5	 → Spaces; 0	

Selecting a sign.

 → 1x press = j	 → 1x press = . (period)
→ 2x press = k	→ 2x press = , (comma)
→ 3x press = l	→ 3x press = ?
→ 4x press = 5	→ 4x press = !

Use the key, to Choose from 4 Writing Styles:

 **Abc**: Upper and lower case – Upper case only at beginning of sentence

 **abc**: Only lower case – all letters are written in lower case

 **ABC**: Only upper case – all letters are written in upper case

 **123**: Numbers

I Made a Mistake. What Now?

- To delete single signs on the left of the vertical line „|“, press the  key briefly.
- If you press and hold the  key for 3 seconds, all signs to the left of the vertical line „|“ are deleted.
(for instance to remove complete passages of text)

Inserting Special Symbols



Press the  key:

to move, as shown,
up with the  key,
down with the  key,
left with the  key, and
right with the  key.

Once you have found the desired sign,
press  or  to insert it into the text

4.2 SMS-TEXT MESSAGES

SMS (short message service) are short written messages which may be sent to other mobile phone users. You only pay for sending them.

Note: Some landline telephones can also receive SMS.

4.2.1 Writing SMS

1. Press the  key on the right of the mobile phone.
2. Select **SMS**.
3. Select **New Message** with .
4. Compose your SMS with the key pad.
5. Delete by pressing .

Suggestions and tricks for composing a text message

- A name and telephone number can be inserted into the SMS text from Phone book:

Press the  key and then navigate to **Insert Name and Number** with the  key.

You will now see the phone book screen. Navigate to the desired entry by using the   keys and insert it into your SMS with .

- You can send maximally 480 signs. If your message is longer than 160 or 320 signs, it will automatically be divided into 2 or 3 messages. In the upper left corner of your screen you will see an indicator telling you how many signs are still available to add to your SMS.

*Example: **1/135** means that you have another 135 signs available for your message.*

If more than 160 signs have been written, the text will be sent in two messages, and the indicator in the upper left corner changes to **2/...**

4.2.2 Sending SMS

1. To send the completed text, press .
2. Select **Send** with the  key.
3. Telephone number saved/not saved to your mobile phone:
 - A Telephone number already saved in the phone book:
 4. **Select** Search by pressing .
 5. Open **Phonebook** by pressing  again.
 6. Navigate to the name with  or enter the first letters of the name.
 7. As soon as the desired number is displayed, select it with .
 8. One last  sends your SMS.
 - B Telephone number used recently, but not saved in Phone book:
 4. Select **Search** by pressing .
 5. Using  to navigate to **Unsaved Numbers**.
 6. Select using .
 7. Using , navigate to the desired number in the displayed list of numbers (dialled, received, missed, SMS).
 8. Select using .
 9. One last  sends your SMS.
 - C New telephone number
 4. Enter the telephone number on the key pad.
 5. Press  to send SMS.

4.2.3 Receiving SMS

A short signal and vibration indicates a received SMS.

The display shows: **New SMS**

Press to select the SMS. You can now read the message.

For longer texts, scroll down with the key.

4.2.4 Answering SMS

1. When you have finished reading the SMS, use to scroll down until the items **Delete SMS, Call Number, Read Next SMS, Answer, Forward, Save to Phonebook** are displayed.
2. Select Answer using .
3. Using , navigate to **Templates** (pre-designed short answers, for instance Yes/No, Everything OK), or to **Original Text** to include it in your answer, or simply to **Empty Page** and select it using .
4. Then press twice to send your answer to the sender.

4.2.5 Deleting SMS

Because a full SMS memory prevents the reception of further SMS, it must be deleted from time to time.

1. Press the  key on the right of the mobile phone.
2. Select **SMS**.
3. Use  to navigate to **Delete SMS** and select it with .
4. Now you either delete the entire SMS memory by selecting **ALL SMS**, or you use  to target only **Received SMS** and select them with .
5. Select the following prompt:
Are you sure you want to delete all received SMS? by pressing .

You can also delete particular SMS: scroll down in the chosen message, until you see **Delete SMS**, then press  twice.

4.2.6 Sending Phone Book Entries via SMS

If the recipient of your SMS is also using a mobile phone, the entry will automatically be saved in his or her phone book.

1. Press the  key on the right of the mobile phone.
2. Select **SMS**.
3. With   navigate to **Send PB Entry via SMS** and select it using .
4. Use  to navigate to the entry you want to send, and select it with .
5. Enter the telephone number, or look up the name of the recipient and select it by pressing .

4.2.7 Creating and Inserting Templates

Templates are frequently used messages like **Please call**, or **Running late**, or **I love you**. Once made or selected from the template list they help save time when writing SMS messages. Existing templates can be changed before sending them. (See below)

Creating a new template

1. Press the  key on the right of the mobile phone.
2. Select **SMS**.
3. Use  to navigate to **Templates** and select it with .
4. Select **New Template** with .
5. Write the desired text using the key pad.
6. Press  to save it as a new template.

Changing existing templates:

1. Press the  key on the right of the mobile phone.
2. Select **SMS**.
3. Use  to navigate to **Templates** and select it with .
4. Navigate to the template you want to change using  and select it with .
5. Use  to navigate to **Edit / Send Template** and select it with .
6. Edit text with key pad and delete key  if needed.
7. Press  to go to the submenu.
8. Either send the changed template as SMS by pressing , or navigate to **Save as Template** using . If you want to use the new text as a template in the future, save it with .

4.2.8 SMS Blacklist

If you do not wish to receive SMS from certain people or advertisers, you can block whole numbers, or area codes (for instance 0900).

4.2.9 SMS confirmation

As soon as your SMS has been received, you will get a confirmation SMS. To de-activate or activate this service, proceed as follows:

1. Press the  key on the right of the mobile phone.
2. Select **SMS**.
3. Use   to scroll to **SMS confirmation** and select it with .
4. Use   to go to **On** or **Off** and select it with .

Please note: Most network providers charge for this service.

4.2.10 SMS Service Centre Number

Your network provider's central number for processing all short messages. Normally, this number is already saved on your SIM card, and you need not enter or change anything.

4.3 PHONE BOOK

The phone book allows you to save, change or search up to 500 numbers. The entries may be saved to the phone, or the SIM card. (See section 4.3.6.)

Please note: We recommend saving your phone book regularly to a SIM back-up (available in stores, for instance as key pendants). If you should lose your telephone, or your SIM card, you still haven't lost all your phone book.

4.3.1 New Phone Book Entry: Saving Names and Numbers

1. Press the  key on the right side of your mobile phone.
2. Use  to select **Phonebook**.
3. Use   to scroll to **New Entry** and select it with .
4. Enter the telephone number including area code using the key pad.
Example: "01509876543".

Suggestion: Always store the number including the international country code. Example "+491509876543"

Please note: Enter + by pressing  twice.

5. Press  to continue.
6. Enter the name on the key pad..
7. Save it by pressing .

*Please note: You will be prompted to save the number of every incoming or outgoing call which has not previously been saved to your phone book. You can de-activate this function in the menu under **Phonebook / Contact Settings / Auto-Save Phonebook**.*

4.3.2 Editing Phone Book Entries

1. Press the  key on the right side of your mobile phone.
2. Use  to scroll to Phonebook and select it with .
3. Use  to navigate to Entry and select it with .
4. Use   or the key pad to navigate to the entry to be edited, and select it with .
5. If necessary, correct the name using the key pad, or press  to delete a sign.
6. Continue with .
7. Using the key pad, or  to delete, correct the telephone number. To move through the individual numbers of a particular entry use  .
8. Use  to save the edited entry.

4.3.3 Name Search

You may select a number from the phone book list and call it.


Press , to open **Phonebook** in standby mode or search for the name in the **Contact/Name** menu.

- Search for a phone book entry by entering one or more letters of the name on the key pad.
- The phone will find the entry, even if you have saved it as given name and surname (separated by a space), and are searching for the first name or the surname.

Phone book



Enter one first letter

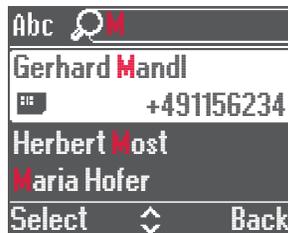

Enter several letters



Press  to call the selected number.

4.3.4 Top 5: The Five Most Important Numbers

Your five most important numbers can be placed at the beginning of the phone book list, regardless of their alphabetical order.

Press and hold **1** for your Top1 entry, the number is dialed;

Press and hold **2** for Top2, and so on ...

or press  to open **Phonebook** and call Top1 with .

To determine the Top5, proceed as follows:

1. Press the  key on the right side of your mobile phone.
2. Press  to navigate to **Phonebook** and select it with .
3. Press  to navigate to **Top 5** and select it with .
4. Press  to navigate to **Save Top 5** and select it with .
5. Select a new **Top 1** with .
6. Use  or the key pad to navigate to the desired phone book entry, and select it with . A list of previously saved Top5 numbers will be displayed briefly.
7. For other important numbers, repeat the previous steps as needed.

Please note: Only an existing phone book entry may be selected for Top5.

4.3.5 Saving Telephone Numbers from Call Lists or SMS to the Phone Book

Call lists:

You have opened a call list, and want to save the telephone number in your phone book.

1. Use  to navigate to **Save to Phonebook** at the end of the call list and select it with .
2. Use  to scroll to the desired number and select it with .
3. Enter the name and save it with .
4. If necessary, correct the number with  and save it with .

SMS:

1. Use  to navigate to **Save to Phonebook** at the end of the SMS and select it with .
2. Use  to scroll to the desired number and select it with .
3. Enter the name and save it with .
4. If necessary, correct the number with  and save it with .

4.3.6 Phone Book Settings

Save entry to

- **SIM card:** You may transfer your phone book list to another mobile phone, or
- **Telephone:** Your phone book list stays in your phone when changing SIM cards.

Memory location determines if you are opening a phone book entry from SIM memory, phone memory, or from both locations. Memory Status shows you how much memory has been used on your SIM card or in your phone.

AutoSave to Phonebook is a particularly convenient possibility to expand the phone book. You will be prompted to save the previously unsaved number of any incoming or outgoing call.

4.3.7 Accessing the Phone Book via SMS

To save you entering new telephone numbers into the phone book, you can delegate this job to family, friends and acquaintances.
(For details see section 2.8.)

4.4 SETTINGS

If you want to change settings (for instance the alarm, ringer volume, display contrast...) this is the section to read.

1. Press the  key on the right of your mobile phone.
2. Use  to navigate to **Settings** and select it with .

Please note: The current setting is indicated by a checked box (). A new setting is indicated by a bar. Save the new setting with  or leave the old one by pressing .

4.4.1 Silence/Sleep, Meeting/Theatre, or Maximum/Bus

There are situations where it is polite not to annoy other people with ringing telephones (restaurant, theatre, cinema, etc.). This is why your mobile phone has the functions **Silence/Sleep**, **Meeting/Theatre**, and **Maximum/Bus** under the setting **Ring Tones & Signals**.

If you turn on the **Silence/Sleep** function, all signal tones of your mobile phone will be de-activated (ringer, vibrator, key tones, SMS tone and confirmation signals). Only your alarm will still ring. This allows you to sleep restfully without being disturbed by any calls.

Choose the **Meeting/Theatre** function, when you want to be alerted to a call or a message (by the vibration alarm), but don't want others to notice – if you are sitting in a meeting, or in the theatre. Instead of ringing, your phone will beep twice and vibrate for 10 seconds. SMS and alarm will only cause the phone to vibrate.

If you select the **Maximum/Bus** function, the ring tone will be set to maximum volume and sound together with the vibration alarm. Receiver volume, key tones, SMS tone and confirmation signal are also set to maximum volume. Use this setting if you are in noisy surroundings, for instance on a bus.

4.4.2 De-activate PIN Prompt

See section 1.6

4.4.3 Birthday Reminder

You can save birthday reminders.

Following the birthday reminder you will be asked if you want to congratulate the person, if the name is already stored in the phone book.

If there is no entry for the person, you will be prompted to enter a name when you store the birthday reminder. In this case you will be reminded of the birthday, but won't be asked if you want to call.

4.4.4 SMS to Phonebook

Here you can determine who may send you phone book entries by SMS.

(See section 2.8)

On: Anyone may send you phone book entries by SMS.

They will be stored automatically in your phone book.

Off: No one can send you phone book entries.

However, entries will be displayed as SMS.

Only from PB: Only entries of addresses stored in the phone book will be accepted. Messages received from unsaved addresses will be displayed as SMS.

4.4.5 Phone Book Settings

See section 4.3.6

4.4.6 Top 5: The Most Important Numbers

See section 4.3.4

4.4.7 Voicemail Number


If you press and hold the **[0]** key for 3 seconds, you will be connected automatically with your voicemail. In case this number is not stored in your phone or on your SIM card, you will be prompted to enter the number. If you do not know the number, call the network provider hotline free of charge.


Don't worry, it is very simple, and makes using your voicemail much more convenient afterwards.

4.4.8 SMS Service Centre Number

See section 4.2.10

5 MENU OVERVIEW

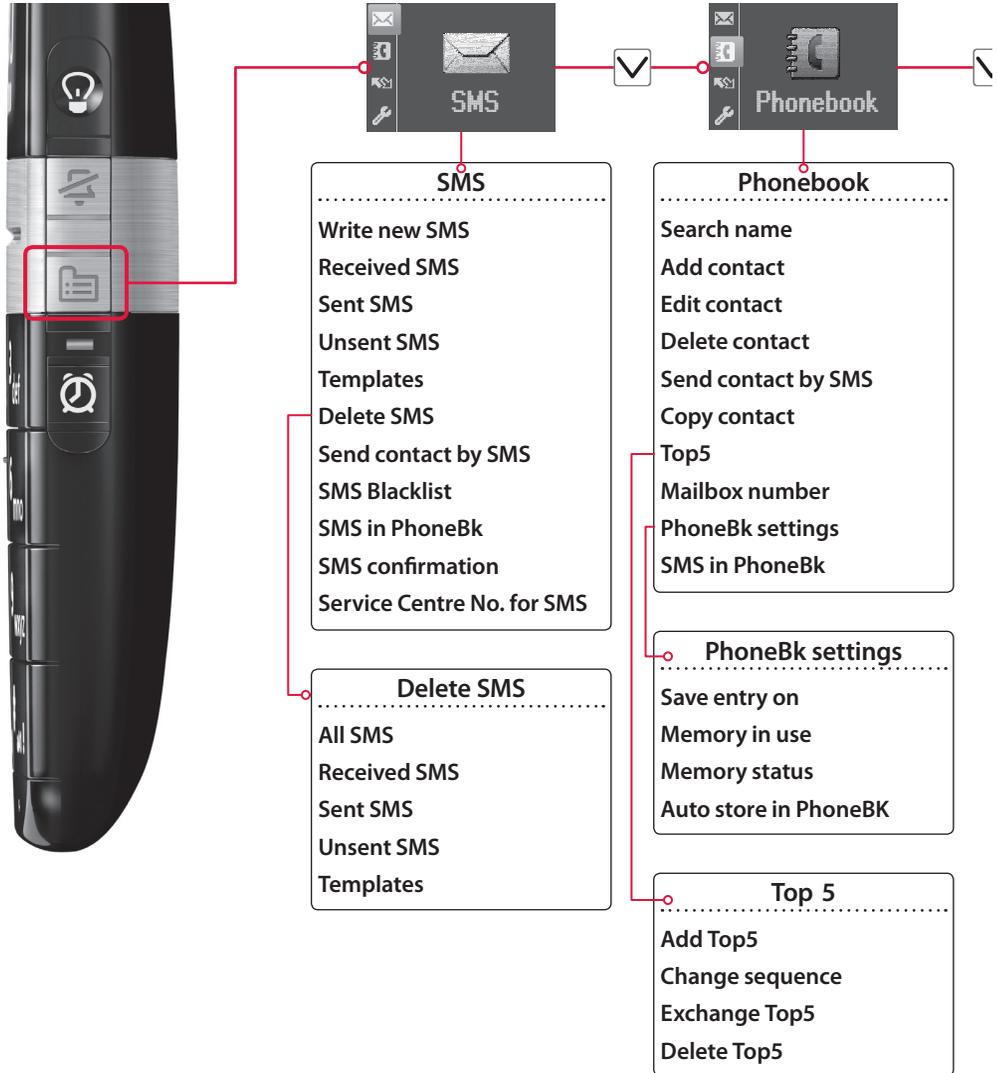

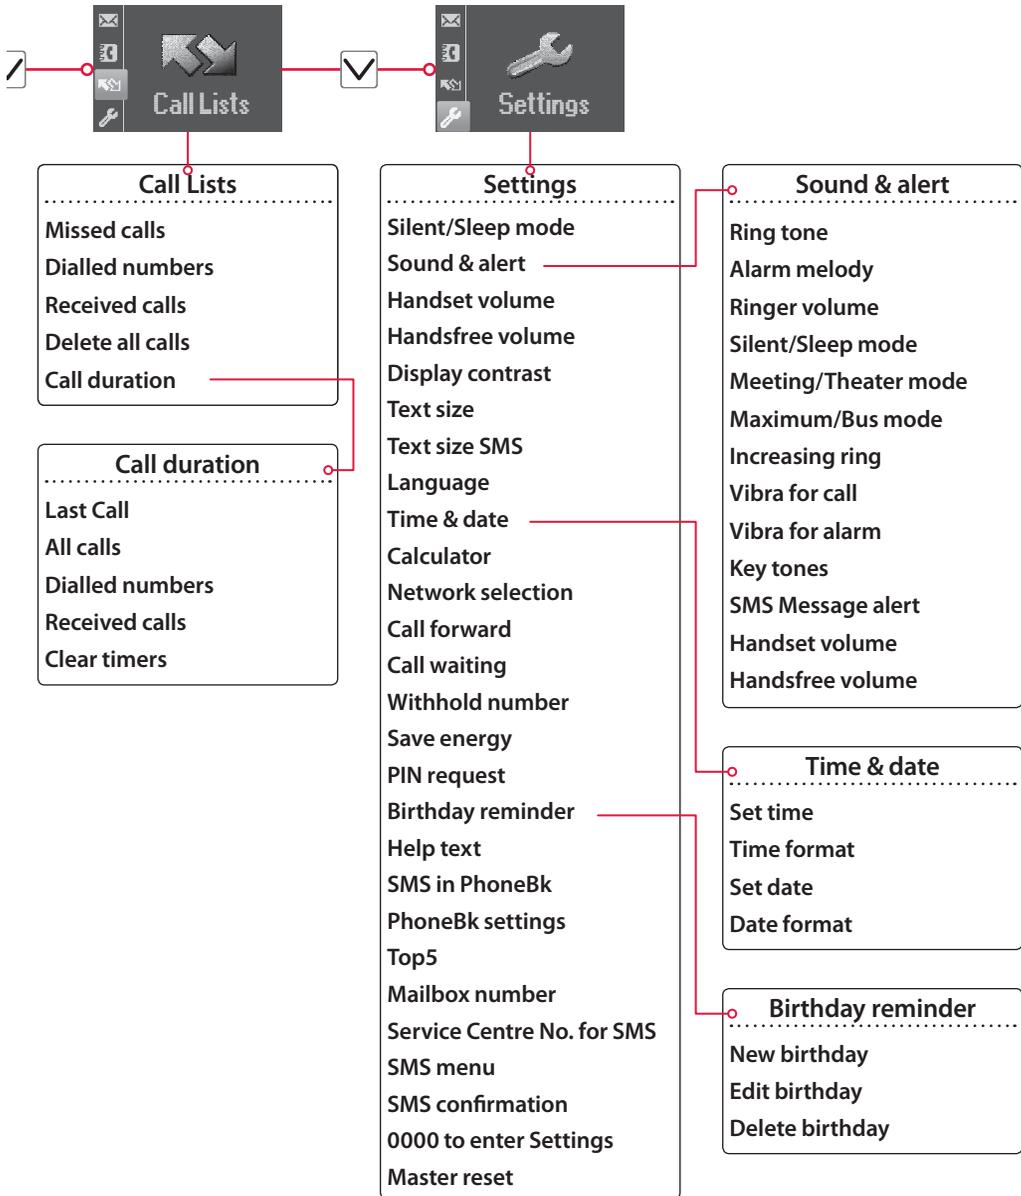

6 GENERAL INSTRUCTIONS

6.1 SAFETY INSTRUCTIONS

- Switch your mobile phone off in hospitals or in the vicinity of medical equipment. 
- Keep your mobile phone a minimum distance of 20 cm away from pacemakers, if it is turned on. Never keep the phone in your chest pocket. Hold the mobile phone to the ear furthest from the pacemaker. If you suspect any interference with the pacemaker, turn off the mobile phone immediately. 
- Never drive a car while holding the mobile phone in your hand. Observe national law and traffic regulations governing the use of mobile phones in traffic. 
- Always turn your mobile phone off inside an airplane.
- Turn your mobile phone off in the vicinity of petrol stations and locations with explosive goods. 
- Never shine the LED flashlight into the eyes of people or animals
- Mobile phones may cause interference in TV sets or radios, particularly when the handset is used close to such a device.
- If the speaker or headset is set to a high volume this can cause hearing damage

6.2 WARRANTY

The 12 month warranty period begins with the delivery of the device. Verify the delivery date with the **original receipt** (invoice, cash receipt) **with IMEI number**. Store these documents carefully. The extent of our warranty is based on the warranty conditions in effect at the time of delivery.

To the greatest possible extent under current law emporia will not be liable under any circumstances for the following situations:

- Any loss of data or income
- Any particular or incidental damages, as well as any consequential or collateral damages, in whatever way these might have been caused.

6.3 CORRECT USAGE

This mobile phone is robust and designed for mobile operation.

However, it must be protected from moisture (rain, bath...) and impact.

Do not expose it to direct sunlight.

Any utilization other than described above will cause damage to the device, and may be hazardous (electric shock, fire, etc.). The entire product must not be altered or rebuilt, and the housing must not be opened.

- The power plug is suitable only for use with residential-type outlets of the public mains with 230 Volt/ 50 Hz (10/16A) alternating current.
- Always store batteries out of reach of children.
- Never attempt to remove the cover of battery packs, to cut, open, break, bend, or pierce batteries, or to destroy them in any other way
- Never use damaged chargers or batteries
- Use only emporia-approved accessories and batteries. Ask your authorized dealer for advice.

6.4 DISPOSAL

- Disposal of packaging: Packaging and packaging materials are recyclable and should always be returned.
- Disposal of batteries: Batteries do not belong into domestic garbage! As a consumer you are required by law to recycle used batteries. You may return the to your local collection point or to the dealer.
- Disposal of the device: Do not throw your mobile phone into the garbage, once it has outlived its usefulness. For the benefit of the environment, take it to a recycling location for used phones so it can be processed in an environmentally responsible way.



6.5 TECHNICAL PRODUCT DESCRIPTION

- Hearing aid compatible loudspeaker
- Dual band GSM 900/1800
- Dimensions: 109 x 50 x 14 mm, 92 g
- Display: 1.8" OLED 160 x 128 Pixels
- Operating temperature: 0 - 40°C
- Battery AK-V36: Li-Ion 3,7V / 1100 mAh
- Standby Time: up to 300 hrs.
- Call time: up to 240 min.
- Internal antenna, SAR 0.354 W/kg
- Charger RL-V170EU (In: 110-240V~ Out: 5,0V...500mA)
- Flashlight – Protection class 3

EG-KONFORMITÄTSERKLÄRUNG
EC-DECLARATION OF CONFORMITY

Hiermit erklären wir, Emporia Telecom Produktions- und Vertriebs-GmbH & Co.KG., dass die Bauart des nachfolgend bezeichneten Gerätes den unten genannten einschlägigen EG-Richtlinien entspricht.
We, Emporia Telecom Produktions- und Vertriebs- GmbH & Co. KG. declare under our sole responsibility that the following product is in conformity with the following relevant harmonised standards.

Artikelbezeichnung: Dual Band Mobile Phone

Artikelnummer: V35

Kind of Product: Dual Band Mobile Phone

Article number: V35

Einschlägige EG Richtlinien / *Governing EU-regulations:*

Funkanlagen/Telekommunikationseinrichtungen 1999/5/EG

R & TTE Directive 1999/5/EC

Council Directive R&TTE 1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

CE 0682

Harmonisierte EN-Fach- und Grundnormen:

Harmonized EN-standards:

Der Artikel entspricht folgenden Normen:

Sicherheit / *Safety*: EN 50332-1:2000
EN 60950-1:2006

Gesundheit / *Health*: 50360:2001
EN 62209-1:2006

EMC: EN 301 489-1 V1.8.1
EN 301 489-7 V1.3.1
EN 301 489-17 V1.3.2

Radio Spectrum: EN 301 511 V9.0.2

Signed:

Herbert Schwach
General Manager



emporia

Date of Issue: March 26, 2010

Place of Issue: Linz/Austria

7 FREQUENTLY ASKED QUESTIONS

What do I have to pay for?

You will begin to be charged for a phone call you initiated once someone (or your voicemail) has answered on the other end. When you use the SMS function, you will only be charged for sending the SMS, not writing or receiving it.

Any other functions (alarm, calculator,) are free of charge.

Calling Abroad

If you are outside the coverage of your own network provider, your mobile phone will automatically find another network. Many phone cards will need to be enabled by your network provider for usage abroad. Please contact your provider.

Can I make an emergency call without reception or credit balance?

- Without signal you cannot make a call (**no service**).
- If **Limited Service** is displayed, you either have no connection to your network provider, or no credit balance. In this case you can place an emergency 112 call, but no other calls.

How often should I charge my battery pack?

Don't recharge your batteries after every call. Even with "intelligent" electronic chargers this will result in reduced battery capacity.

To keep your batteries "fit", let them deplete completely at least once a month. If you are not using the mobile phone for more than one month, remove the battery pack.

How long will my phone work until I have to charge it again?

The operating time depends among other things on the distance from the transmitter (if you are far away from it, the mobile phone needs a lot more energy to maintain contact), on the number of calls, and the volume setting. Under optimal conditions the batteries will last for 4 hours of calling. In standby mode you may count on an operating time of maximally 300 hours. If you have been on the phone for 2 hours, the standby time is reduced to 150 hours.

If the signal strength (reception) of your network varies strongly or fails altogether at a particular location, your mobile phone is continuously forced to search for an available network. This increases power consumption, and consequently depletes your batteries faster.

How do I clean the mobile phone?

Clean the device with a damp cloth. Avoid sprays and too much moisture. It might get into the interior of the device and cause damage. Never use cleansers containing abrasive materials, alcohol, or solvents (turpentine). They might damage the housing and/or printed surfaces.

What is the standby mode?

You can receive calls and see the time display. If key lock is engaged you will see a large key symbol instead of the time (*see section 3.3*). If the phone is in energy saving mode, the display shuts off, but the phone remains ready to receive calls.

Did I select this function, or not?

Your current setting is indicated by the checked box (☑).

The new setting is indicated by a bar.

Save the new setting with or keep the old setting with .

My call didn't go through:

- Make sure you have the correct number and area code.
- Did you remember to include the area code even for a local call?

SIM card inserted! Only emergency call 112 works!

- Check to make sure your SIM card is correctly inserted!
- Gold contacts on the bottom? Clipped corner back left?
- Remove SIM card and insert it again.

The screen of the mobile phone is empty (display turned off):

Your phone is in energy saving mode and has turned off the display (you can receive calls), press - the display will come on again.

The phone may be switched off (press and hold the key on the left-hand side of the mobile phone for 2 seconds to switch it back on).

The screen of the mobile phone is black

The device is switched on, you hear key tones, but can't see anything on the screen.

The screen may be broken – have device serviced.

The mobile phone doesn't turn on

Remove the battery pack, insert it again, and switch the device on.

The phone doesn't charge

Leave the mobile phone connected for at least 10 minutes. If it does not begin to charge (battery symbol displayed) contact your service centre, as the battery or the charger may be defective.

Is it possible to hide my number?

If you don't want your telephone number to be seen by the other party, go to the menu and select **Settings / Hide number / Yes**.

There is fluid leaking from the battery pack

Please make sure the fluid doesn't come in contact with skin or eyes.

If this should happen, immediately rinse the area with water.

To be completely safe, contact your doctor.

The battery pack is damaged

This may happen, for instance, if the mobile phone or the battery pack fall on a hard surface. Stop using the battery pack, and let a service professional determine if the batteries may be used again.

Emporia Telecom Produktions-
und Vertriebs-GmbH & CoKG

Industriezeile 36
4020 Linz, Austria

fon +43.732.77 77 17-0

fax +43.732.77 77 17-8

www.emporia.at

Emporia Telecom Hotline:

Deutschland: 0 180 · 59 13 181

Österreich: 0 732 · 77 77 17 · 446

Schweiz: 0 8484 · 50 0 04

CE 0682

Druckfehler, Irrtümer und technische Änderungen vorbehalten.
PartNo.: 54373-ENG; ENGLISH; V35IM_ENG-V3_G2-201008