

emporia **ELEGANCEplusGPS**

## DEAR MOBILE PHONE USER!

Congratulations on your **emporiaELEGANCEplusGPS** mobile phone! To get you acquainted with your new mobile phone as quickly as possible, we have put together all the essential information on a few pages.

We hope you will have fun with your phone, and wish you all the best.

EMPORIA Telecom

Eveline Pupeter

Management

Albert Fellner

## Package content:



Mobil phone



Charging cable  
(RL-V170EU)



Battery pack  
(AK-V36)



User guide

## WHAT ARE ALL THE KEYS FOR?

### Loudspeaker

### Display (=Screen)

### End Call/Back/Delete key

- During a call: End call
- In menu: one step back
- When entering numbers or letters: delete

### Make or receive a call/OK-key

- Dialling: Insert number and press 
- Incoming call: answer
- In menu: select
- In standby mode: Access to call list (dialled, received, missed)

### Arrow keys

- Scroll through **Phone book** and menus
- In standby mode access the **Shortcuts** with 
- In standby mode access **Phone book** with 

### Key / Voicemail key

- Press and hold: listen to your voicemail
- When writing (SMS, phone book): insert a space

### Star key

- Press and hold: last 10 numbers dialled
- Press twice: + (for country codes, i.e. +44 for UK)
- Press 3 times: insert a dial pause
- When writing: special symbols (?!,@-+ \$€ etc.)
- Flashing red: charging or battery is low
- Lights red: battery is fully charged



### Pound key

- Press and hold: List of missed calls
- When writing: Switch from upper to lower case or numbers
- Flashing blue: missed call

### Emergency button

### On/off key

To switch on or off: press and hold for 2 seconds

### Volume adjustment

- Change the receiver volume during a call
- If telephone rings: press  to turn off the ringer (it will ring again for the next call)

### Key lock

- Prevents accidental keypresses.
- Slide down to lock the keypad,
- slide up to unlock the keypad.



## DISPLAY SYMBOLS *(See also section 4)*



Battery indicator



Alarm on



Bluetooth on



Missed call



Call forwarding



New SMS



Silence/Sleep



Meeting/Theatre



Maximum/Bus



**Flashlight key** 

To switch on/off the flashlight.

*CAUTION: Don't shine the light directly into the eyes of people or animals!*

**Bluetooth key** 

To switch on or off:  
press and hold for 3 seconds

**Menu key** 

Bring up the menu.  
(SMS, call list, phone book, settings)

**Alarm key** 

- Slide up to turn on.
- Slide up to turn off.

**Battery compartment**

High performance Li-Ion battery



**Signal strength**



**Roaming** If you are abroad, it replaces the signal strength icon, and you know that you now call in the foreign network.



**GPS on**



**GPS fixed:**

Appears when the GPS function localized your position.  
(See section 7.6)

# TABLE OF CONTENT

<b>1.</b>	<b>Getting started</b>	<b>6</b>
1.1	Inserting the SIM card.....	6
1.2	Inserting the battery.....	6
1.3	Charging the battery .....	7
1.3.1	Charging with the charger cable.....	7
1.3.2	Charging with the desktopcharger (optional).....	7
1.4	Turning the mobile phone on or off.....	7
<b>2.</b>	<b>Navigating the phone</b>	<b>8</b>
2.1	User help in menu .....	8
2.2	Display light.....	8
2.2	Using your phone for the first time .....	9
<b>3.</b>	<b>Making a call</b>	<b>10</b>
3.1	Dialling with the keypad .....	10
3.2	Redial.....	10
3.3	Call list.....	10
3.4	Handsfree.....	11
3.5	Handsfree with the desktop charger .....	11
3.6	Dialling from the phone book .....	11
3.7	The Phonebook .....	12
3.7.1	Save names and numbers .....	12
3.7.2	Edit names and numbers.....	12
3.7.3	Dialling from the Phone book .....	13
3.7.4	Search a Phone book entry.....	13
3.7.5	Save a Top 5: Save the five most important numbers.....	13
3.7.6	Call a Top 5: Call the five most important numbers.....	13
3.7.7	Accessing the Phone book via SMS .....	14
3.7.8	Phonebook settings .....	14


<b>4.</b>	<b>Informations on the standby screen</b>	<b>15</b>
<b>5.</b>	<b>SMS - Write text and send it</b>	<b>16</b>
5.1	Entering text with the keypad .....	16
5.2	Sending SMS .....	18
5.3	SMS confirmation.....	18
5.4	SMS Service Centre Number.....	18
<b>6.</b>	<b>Important menu items</b>	<b>19</b>
6.1	Sound and alert settings .....	19
6.2	Shortcuts .....	19
6.3	Security settings.....	20
6.4	Geburtstagerinnerung .....	20
6.5	Voicemail number .....	20
<b>7.</b>	<b>Additional features</b>	<b>21</b>
7.1	emporia emergency button .....	21
7.2	Bluetooth™.....	24
7.3	Voice announcement .....	25
7.4	Calendar.....	25
7.5	FM Radio.....	26
7.6	Positioning.....	27
<b>8.</b>	<b>Menu overview</b>	<b>30</b>
<b>9.</b>	<b>Appendix</b>	<b>32</b>
	Safety instructions.....	32
	Warranty, Correct usage.....	33
	Disposal, Technical product description.....	34
	EG – Declaration of conformity .....	35

# 1. GETTING STARTED

## 1.1 INSERTING THE SIM CARD

You need a SIM card to use your phone. You got the SIM card from your network provider.

**Insert the SIM card as follows:**

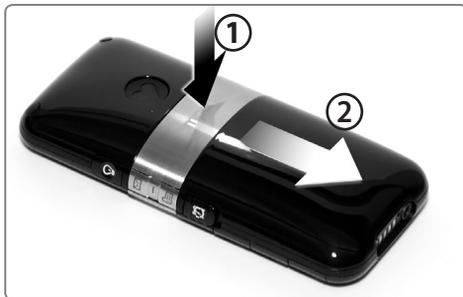

Remove the battery cover.



Insert the SIM card with the gold chip down and the clipped corner on the top left.

## 1.2 INSERTING THE BATTERY



The battery contacts have to face the gold coloured contacts of the mobile phone.



Slide the cover with light pressure until it snaps into place.

### 1.3 CHARGING THE BATTERY

*Please note: The battery pack included with your mobile phone should be charged for at least 4 hours before your first call.*

#### 1.3.1 Charging with the charger cable

Insert the charging cable into the jack on the bottom of the phone and plug the power cord into the power socket.

The battery icon on the display informs about the loading progress.

Bars in the battery icon fill up = battery is charging;

Bars in the battery icon stop moving = battery is fully charged.

*Please note: A large battery symbol is shown briefly at the start of the charging process.*



#### 1.3.2 Charging with the desktop charger (optional)

Insert the plug of the charger cable into the socket on the rear of the desktop charger and the power plug into the power socket.

Finally insert the mobile phone into the desktop charger.



### 1.4 TURNING THE MOBILE PHONE ON OR OFF

Press the  key on the left of the mobile phone for two seconds, to turn the mobile phone on or off.

## 2. NAVIGATING THE PHONE

- Use the -button (on the right of the mobile phone) in standby mode, to enter the main menu (SMS Messages, Phone book, Settings, ...).  
*Information about the standby mode, see Chapter 4.*
- Use the two arrow buttons   to navigate through the menu.
- To select a menu item, press the -button.  
This button is also used to confirm settings, like starting a call or accepting one.
- To go a step backwards in the menu, press the -button.
- To return to the standby screen, press the -button repeatedly or press and hold the -button until the standby screen appears.

### 2.1 USER HELP IN MENU

If you select a menu item, without confirming with , an information text about this menu item is shown after a while automatically.

To hide the text, press the  button.

Go to **Settings / Help Text** to enable or disable this function.

### 2.2 DISPLAY LIGHT

After a few seconds without input, the display is switched off to save power. By an incoming call or pressing any key, the screen turns on again automatically.

Go to **Settings / Display & light / Display light** to define the time, after how many seconds the screen is turned off.

## 2.2 USING YOUR PHONE FOR THE FIRST TIME

1. You will be prompted to set the **Language**:

Choose desired language as described by using the arrow keys and confirm with .

2. You will be prompted to set the **Time**:

Use the arrow keys or the keypad to set the time and confirm with .

3. You will be prompted to set the **Date**:

Use the arrow keys or the keypad to set the date and confirm with .

4. You will be prompted to set the **Text size**:

Use the arrow keys to choose **Small, Medium** or **Large** and confirm with .

5. You will be prompted to set your **Own number**:

Use the keypad to enter your number and confirm with .

6. You will be prompted to set your **Name**:

Use the keypad to enter your name and confirm with .

*Please note: To change date or time anytime later go to **Settings/Time & date** in the menu.*

*Please note: To change the text size anytime later go to **Settings/Text size** in the menu.*

*Please note: To change your number or name anytime later go to **Settings/Own number** in the menu.*

Depending on your network operator, you may now be asked to enter a 4-digit PIN code. It can be found in the documents you received from the network operator: Enter the PIN code and confirm it with .

*See also section 6.3*

## 3. MAKING A CALL

### 3.1 DIALLING WITH THE KEYPAD

Use the keypad to enter the phone number including the area code.

*Example: "044789789" Enter number of 789789 with area code 044*

– Press the -button to start a call.

– Press the -button to end a call.

When your caller hangs up first, is no need for pressing .

### 3.2 REDIAL

Press the -button in standby mode (*see chapter 4*) to redial one of the most recently called numbers. Use the arrow keys to navigate through the list.

Press the -button to call the selected number.

### 3.3 CALL LIST

Press the -button in standby mode (*see chapter 4*) to access the list of the last dialed, missed and accepted numbers.

Use the arrow keys to navigate through the list.

Press the -button to call the selected number.

### 3.4 HANDSFREE

To switch during a call to handsfree mode press the -button. Select **Handsfree** and confirm with .

### 3.5 HANDSFREE WITH THE DESKTOP CHARGER

If the phone is in the desktop charger, you can answer an incoming call using the handsfree button on the desktop charger, or the -button on the phone. During a conversation with the phone in the desktop charger, the call is automatically placed on handsfree. Your phone will automatically switch to handset mode when picked up.

### 3.6 DIALLING FROM THE PHONE BOOK

The phonebook allows you to store an alphabetical list of names and numbers. To bring up the phonebook press the -button in standby mode (see chapter 4), or select in the menu: **Phone book/Search name**.

*Please note: „Add contact“ see chapter 3.7.1*

*„Search name“ see chapter 3.7.4*

*„The five most important numbers“ see chapter 3.7.5*

## 3.7 THE PHONEBOOK

The phonebook allows you to store, modify, and find up to 500 names and numbers. The entries can be stored on the phone or SIM card.

*Please note: the 500 possible entries refer to the phone internal phonebook.*

### 3.7.1 Save names and numbers

1. Open **Phone book** in the menu.
2. Select **Add contact**.
3. Enter the number with the keypad and confirm.
4. Enter the name with the keypad and confirm.

*Please note: Write text, see chapter 5.*

### 3.7.2 Edit names and numbers

Select an entry in the menu **Phone book/Edit contact** to edit it. Use the keypad to edit the contact and confirm to save it.

### 3.7.3 Dialling from the Phone book

Select an entry in the phonebook and press the -button to start the call.

### 3.7.4 Search a Phone book entry

Go to **Phone book** and enter the first few letters of either the first or last name of the contact to start the search. If a contact cannot be found, **No entry** will be displayed.

*Please note: For help to enter the initials, see chapter 5.1*

### 3.7.5 Save a Top 5: Save the five most important numbers

Go to **Phone book/Top5/Add Top5** to save your five most important numbers on the numeric keys **1** to **5**.

Choose **Top 1** to locate the first desired number from the phonebook and save it.

Choose **Top 2** to locate the second number you want and save, etc ...

### 3.7.6 Call a Top 5: Call the five most important numbers

To retrieve a stored Top 5 number hold **1**, **2**, **3**, **4** or **5** until the number is dialled.

*Please note: If no number is defined, you will be asked, by pressing **1**, **2**, **3**, **4** or **5**, to define a number.*

### 3.7.7 Accessing the Phone book via SMS

You can receive phonebook entries by SMS message

(eg from family, acquaintances, ...),

which are automatically included in your phonebook.

Go to **Phone book/SMS in PhoneBk** to set this function on or off,

or specify that only stored contacts may send phone book entries to you.

The messages have to be written in the following format:

#Name#Nummer# eg: #Tobias#01509876543#

The phone number is automatically saved in your phone book

when a SMS is received.

### 3.7.8 Phonebook settings

You will find following options in **Phone book/PhoneBk settings**:

- **Save entry on**: Here you specify the location (**SIM-Card** or **Phone**).
- **Memory in use**: Select which phone list displayed in your phonebook (**SIM-Card** or **Phone**).
- **Memory status**: See how many numbers are already saved.
- **Auto store in PhoneBK**: Choose whether you want to store the number of the caller in the phonebook at the end of the call.

## 4. INFORMATIONS ON THE STANDBY SCREEN

If no applications (telephone conversation, SMS, menu) is in use, your mobile phone is in standby mode.

The standby screen is shown on the display.

If you use a application or the menu, press the -button repeatedly to return to the standby screen.



### In standby mode, the following symbols may be displayed:

: Charging indicator (See section 1.3)

: Signal strength indicator

: Roaming – Appears when you are in a foreign network. e.g. abroad

: Indicates number or name as a Top 5 entry. (See section 3.7.5)

: Appears at a missed call. (See section 5.3)

: Appears when you received a SMS. (See section 5)

: Appears when the alarm is set and turned on.

: Appears when you select the profile **Silent/Sleep**. (See section 6.1)

: Appears when you select the profile **Meeting/Theatre**. (See section 6.1)

: Appears when you select the profile **Maximum/Bus**. (See section 6.1)

: Appears when incoming calls are diverted.

: Appears when Bluetooth™ is turned on. (See section 7.2)

: Appears when a Bluetooth™ device is paired. (See section 7.2)

: Appears when FM - Radio is turned on. (See section 7.5)

: Appears when the GPS function is turned on. (See section 7.6)

: Appears when the GPS function localized your position. (See section 7.6)

## 5. SMS - WRITE TEXT AND SEND IT

You can use your mobile phone to create and send text messages.

Find further information in **SMS Message/Write new SMS**.

### 5.1 ENTERING TEXT WITH THE KEYPAD

You may enter numbers and letters with the keypad.

Every key represents several signs, depending on how often you press the key.

You may delete or change signs in the entered text later on.

- The vertical line „|” shows your current position.
- You can change your position by using the   keys.
- By pressing and holding   you jump one line up and down at a time.

#### Available signs and functions.

**1** → .,?!'":1

**6** → m n o ö

**\*** → .,?!'":;()@-+ \$ € £ ¥ # % \* & ~ = α  
and Greek letters

**2** → a b c 2 ä à

**7** → p q r s 7 ß

**3** → d e f 3 è

**8** → t u v 8 ü

**#** → Change between upper and  
lower case and keypad  
(„Abc“ „ABC“ „123“ „abc“)

**4** → g h i 4

**9** → w x y z 9

**5** → j k l 5

**0** → Space; 0

#### Selecting a sign.

- 5** → 1x press = j  
→ 2x press = k  
→ 3x press = l  
→ 4x press = 5

- 1** → 1x press = . (period)  
→ 2x press = , (comma)  
→ 3x press = ?  
→ 4x press = !

## Use the **#** key, to Choose from 4 Writing Styles:

- Abc**: Upper and lower case – Upper case only at beginning of sentence
- abc**: Only lower case – all letters are written in lower case
- ABC**: Only upper case – all letters are written in upper case
- 123**: Numbers

## I Made a Mistake. What Now?

- To delete single signs on the left of the vertical line „|“, press the  key briefly.
- If you press and hold the  key for 3 seconds, all signs to the left of the vertical line „|“ are deleted.  
(for instance to remove complete passages of text)

## Inserting Special Symbols



Press the **\*** key.

To move, as shown, up with the **2** key, down with the **8** key, left with the **4** key, and right with the **6** key.

Once you have found the desired sign, press 

or **5** to insert it into the text.

## 5.2 SENDING SMS

1. Go to **SMS Message** and choose **Write new**.
2. After typing the text, press the -button, and select **Send** or **Send to many**.
3. Enter the number manually, or press the -button to click **Search**.
4. Select the desired list (**Phone book** or **Unsaved numbers**) with the -button, choose the number you want and confirm.

The message is being sent to the selected number.

## 5.3 SMS CONFIRMATION

To receive a confirmation message when your SMS is delivered, enable this option under **SMS Message/SMS confirmation**.

*Please note: Some network providers charge for this service.*

## 5.4 SMS SERVICE CENTRE NUMBER

The **SMS Service Centre Number** is the central number of the provider, through which all short messages are handled.

Normally the number is preset by the network operator already on your SIM card. If this is not the case, please contact your network operator.

To edit this number go to **SMS Message / SMS settings / Service Centre No. for SMS**.

## 6. IMPORTANT MENU ITEMS

To facilitate the orientation in each menu item, these are briefly described here.

### 6.1 SOUND AND ALERT SETTINGS

**Settings/Sound & alert** allows you to change the settings for the ringer melody, volume and three predefined modes of ring (**Silent/Sleep mode**, **Meeting/Theatre mode** and **Maximum/Bus mode**).

The time that you set when activating the sets, specifies, when the set will be disabled.

- **Silent/Sleep mode**: All acoustic signals of the mobile phone are disabled.
- **Meeting/Theatre mode**: You will hear a double beep and vibrate instead of a ringtone.
- **Maximum/Bus mode**: All sounds are set to maximum volume with simultaneous vibration alarm.

### 6.2 SHORTCUTS

Go to **Settings/Shortcuts** to define most important feature for you, to quickly access them in standby by pressing the  button.

Selectable functions are: **Write new SMS**, **Calculator**, **Calendar**, **Sound & alert**, **Received SMS**, **Search name** or **Empty** (= Shortcuts disable)

### 6.3 SECURITY SETTINGS

Go to **Settings/Security settings/PIN** to edit the PIN code or to disable the PIN code query. By turning off the PIN code request may be problems due to forgetting the PIN code can be prevented, but the phone is not protected from foreign operation.

### 6.4 GEBURTSTAGSERINNERUNG

In **Tools/Birthday reminder** you can save and manage reminders for birthdays. You can either save birthdays for contacts **From Phone book** or by **Enter name** to store the name only (no telephone numbers).

If the birthday is imminent, a reminder will appear in the saved time.

If a number is stored in the birthday reminder, you call the person by pressing the  button.

To cancel the reminder press .

### 6.5 VOICEMAIL NUMBER

If you press and hold the  key for 3 seconds, you will be connected automatically with your voicemail.

In case this number is not stored in your phone or on your SIM card, you will be prompted to enter the number.

Your voicemail number should be on the documentation you received from your network provider.

## 7. ADDITIONAL FEATURES

### 7.1 EMPORIA EMERGENCY BUTTON

The emporia emergency call function ensures that you get help quickly in crucial moments. In case of an emergency push the emergency button on the reverse side of the mobile telephone either for 3 seconds or 3 times within 3 seconds. The emergency key will still function when the key lock is enabled.

#### Enable the emergency button

Go to **Tools/Emergency button/Emergency button on/off** to enable or disable the emergency function for the emergency button.

#### Saving emergency numbers

Go to **Tools/Emergency numbers/Add Emerg. No.** to customize the 5 emergency numbers.

1. Choose from any of the numbers to edit it.
2. Specify whether it is a **Private** number or a **Helporganisation** and whether an SMS should be send to the phone number.
3. Choose a number from the **Phone book** and confirm it with .
4. Repeat the process for the rest of the emergency numbers.

*Please note: To prevent unintended changes in emergency settings it is required to enter the phone code to access the emergency menus, as well as **Tools/Positioning**.*

## What to do in an emergency?

Press the emergency button on the back of the phone for 3 seconds.

*The emergency button works even when the keypad lock.*

- If you enabled the pre-alarm in **Phone book / Emergency numbers / Prealarm**, a warning tone is played back immediately for 10 seconds. During this countdown the you are able to stop the emergency-sequence by press and hold the  button for 3 seconds.  
*(Caution: this interruption is only possible with a private emergency number, but not with an emergency number of a Helporganisations.)*
- The warning tone will be played back during the whole emergency-sequence, to inform the people around you about your the emergency.

## What happens after emergency key is pushed?

- By pressing the emergency button the emergency sequence is started. Up to 5 emergency numbers will called in a predetermined order until someone answers the emergency call. This process is repeated 3 times. An SMS will also be sent to the private numbers, info the recipient of the incoming emergency call. The speakerphone will also be turned at full volume.
- By answering the emergency call, the called person have to dial  (zero) 3 times, during the first minute of the call.  
*(Not you as the initiator of the emergency call.)*  
Dialing  (zero) 3 times stops the emergency-sequence. At this point, the remaining emergency numbers are no longer called. Also the emergency call will continue until it has been ended by the called person.  
If a **Helporganisation** is called, there is no need to confirm, because the line is always available.

- Parallel to the emergency calls in the background, your position is determined and queried the address of your current position. If this information is available, a text message will be sent to all emergency numbers, including your current location or address.
- If you are called within one hour of the beginning of the emergency call, the telephone will automatically accept each incoming call. If you want to discontinue this function, you have to turn the mobile phone off and on again.  
*(Just pressing  is not sufficient for reasons of safety.)*

### **Please note:**

- *Should the emergency key be triggered accidentally, you have 10 seconds to stop it by pressing .*
- *Dialing 3 times a  (zero) by the receiver of the call (not by the initiator/sender of emergency call) ensures that your emergency call is not forwarded to an answering machine or voicemail.*
- *Your telephone number will be displayed during an emergency call even if you have chosen **Withhold number**.*
- *The emergency numbers must be stored in the phone book to be defined as an emergency number. If no emergency number is defined, your prepaid-card is out of charge or you are outside of the home network of your network operator, the international emergency number 112 will be called.*
- *If you want to save a Helporganisation (ambulance, police, fire brigade, . . .), please contact and clarify this in advance with each institution. No liability will be assumed for possible costs which arise if you call one of these institutions in error.*

## 7.2 BLUETOOTH™

Bluetooth (BT) allows you to connect wireless accessories such as headphones/headsets and use your phone with it.

### Turning Bluetooth on or off

Turn Bluetooth on or off, by pressing the  key or in menu **Tools/Bluetooth**. The  symbol appears when Bluetooth is turned on.

### Pairing – connecting a headset the first time

Before the first use of a headset, it must be paired with the mobile phone:

1. Enable Bluetooth.
2. Search for available devices in menu **Tools/Bluetooth/Connect**.  
A list of all devices in range will be displayed, choose the desired and confirm. *(If no device is paired, the phone automatically starts searching for other Bluetooth devices.)*

*Please note: Paired devices are automatically recognized the next time, if they are in range.*

*Please note: If the words **Enter passwd for pairing** are displayed a special password is needed. This can be found in the manual of your Bluetooth headset.*

*Please note: Activated Bluetooth and a connected headset need more electricity and thus reduce the operating time of the phone.*

## 7.3 VOICE ANNOUNCEMENT

Your mobile phone is able to support you with acoustic messages.

**Numbers:** acoustic playback of the pressed numeric keys while typing in numbers

**Time:** option to announce the time each hour or at a specific interval of time. In standby mode the current time is announced when you press .

**Infos:** spoken notes, eg. Keypad lock, battery empty

### Turning Voice announcement on or off

In menu **Settings/Sound & alert/Voice announcement** you can set desired feature (**Numbers, Time, Info**) on or off.

## 7.4 Calendar

Your mobile phone has an internal calendar to manage tasks, birthday reminders and things like that.

### View calendar:

Go to **Tools/Calendar**. By default, you see depicted the current month. Today is, is highlighted.

### Manage calendar:

1. The highlighted area shows the selected day.

Use following keys to select the desired day:

 for up,  for down,  for left and  for right.

Use  to jump one month back, use  to jump forward.

2. Confirm your choice with , the calendar-menu will be shown.

**Show entries, Go to date, Add appointment, Add birthday, Delete all appointments**

## 7.5 FM RADIO

In menu **Tools/FM Radio** you can turn on or switch off the radio. The radio-symbol  appears when FM-Radio is turned on.

### Search and store radio stations

In menu **Tools/FM Radio/Options** you can search, save and manage radio stations.

Use **Auto search** and save all available stations in your area.

Use **Manual search** to enter the frequency of a desired station with the keypad and save with .

Press and hold a number key, to store the currently selected channel station.

### Play stored stations

Go to **Options/Senderlist** to edit the names of automatically stored stations.

Use   to set a frequency.

Press and hold a arrow key to search the next available station.

By entering the stored position number using the numeric keypad, you can directly select the desired station in the channel list.

## 7.6 POSITIONING

Your mobile phone has a GPS unit (Global Positioning System) to support the emergency function. This feature allows to locate the mobile phone worldwide, and to determine your exact location.

It is also for your own orientation. If you got lost or in case of any other emergency, you achieved help quickly in this way. Other users are also able to find you quickly.

*Please note: The GPS functionality is inside buildings can not be guaranteed.*

*Please note: If after a few minutes, you still have no position, check if you have a direct view to the sky (satellites), and/or go away from high walls of buildings.*

*Please note: Due to the inaccuracy of the GPS data, a result of your position deviation of up to 30 m.*

*Please note: The enabled position determination requires a lot of electricity, thereby reducing the operating time of mobile phone in continuous operation from 350 to 24 hours.*

### Enable positioning

Go to **Tools / Position / Position on/off** to enable or disable the GPS function.

## Query and send current position

Go to **Tools / Position / My position** to see your position, if available, in the geographic coordinates longitude and latitude (= GPS data). You have further the **Options** to send your GPS position data to friends or save it as **Home position**.

## Share your position with friends

Selected contacts have the opportunity to your current position interrogate another mobile phone.

These contacts are defined in your **Friends list**.

Do not worry: numbers that are not on this list can not determine your position.

Go to **Tools / Position / Show friend list** to see which of your contacts is it allowed to check your position.

*Please note: To enter, delete or edit the **Friends list** please contact your service provider.*

*Please note: Rescue organizations will receive the positioning GPS coordinates. Recipients will receive a private google maps link.*

*Please note: If your device is not able to receive a GPS signal, the last saved position will be automatically sent with an appropriate notice.*

## Further settings for position determination

– **View GPS Signal:** Hier werden die aktuell verfügbaren Satelliten für die Positionsbestimmung angezeigt.

– **Home position:** Hier können Sie Ihre persönlichen Adressdaten mit den zugehörigen geographischen Koordinaten speichern.

### – **Pos. Settings:**

– **Data server no.:** Here you can store a individual number of a helporganisation (data line) or a server address for address decryption. This service converts in an emergency and for manual query your position data into a valid address.

– **GPS auto. on:** Here you can specify in which time interval the phone automatically determines its position in everyday life (**1 min, 2 min, 5 min, 10 min, 15 min, 30 min** und **Aus**).

*This option helps to determine your position quickly in an emergency,*

*but also protects the battery. Standby without GPS: ~260 h.;*

*5 minutes-interval: ~24 h.; 10 minutes-interval: ~44 h.;*

*15 minutes-interval: ~60 h.; 30 minutes-interval: ~72 h.*


– **Set Sleeping Period:** Here, you specify at what time of day, the position determination should be switched off.

*This option helps to save battery power.*

*Please note: Normally the Data service Nr is preinstalled for your service package (e. g. special contract with the rescue organization)*

*If not, please request this with your service provider.*

## 8. MENU OVERVIEW

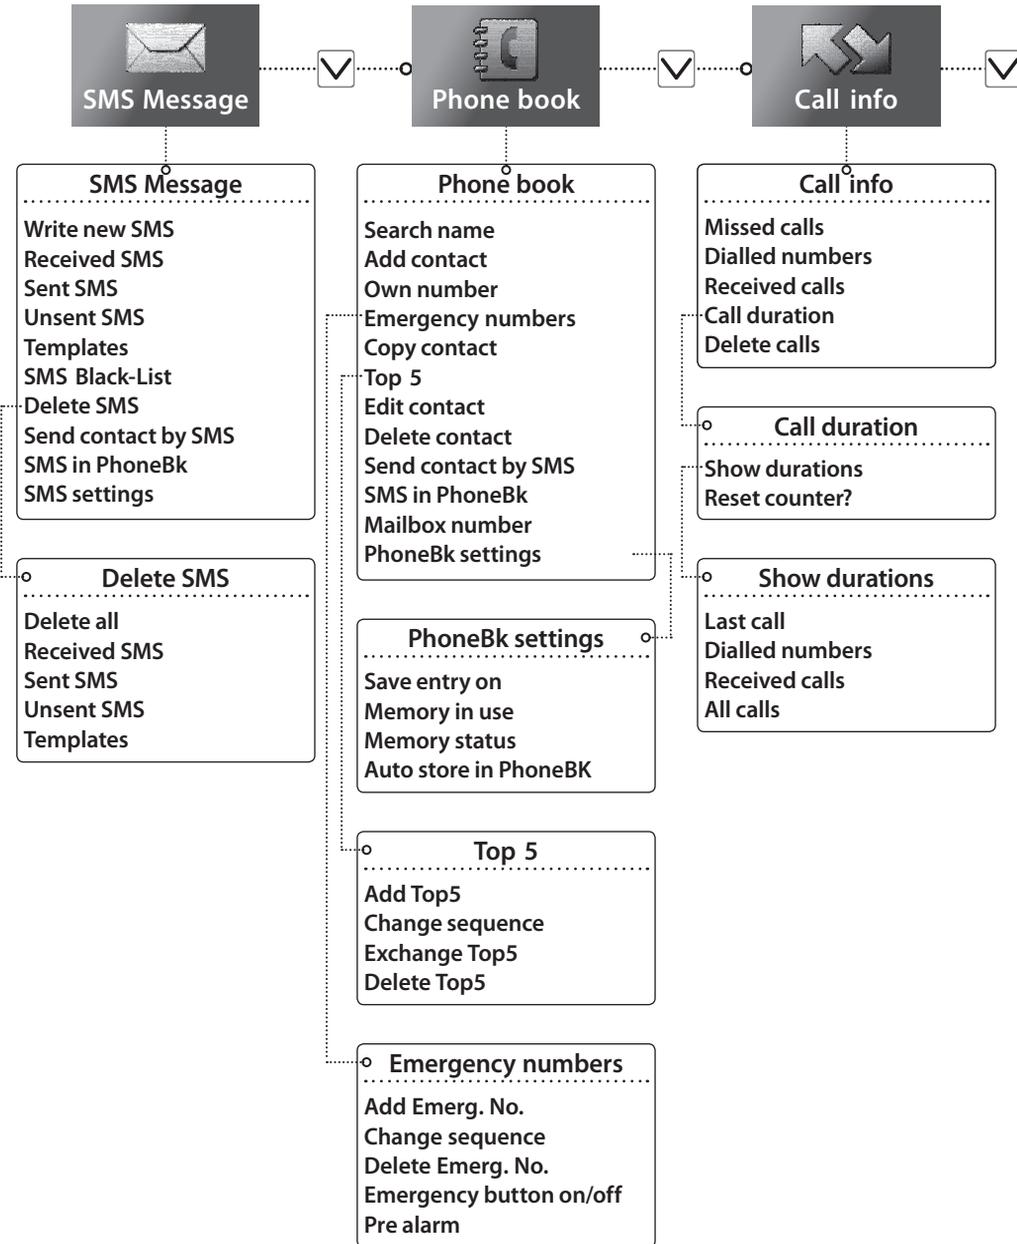



## Settings



## Tools

### Settings

- Silent/Sleep mode
- Sound & alert
- Handset volume
- Handsfree volume
- Display & light
- Time & date
- Text size
- SMS text size
- Language
- Call waiting
- Call forward
- Withhold number
- Help Text
- Selection Mode
- Shortcuts
- Mailbox number
- Service Centre No. for SMS
- SMS in PhoneBk
- Emergency button on/off
- Security settings
- PhoneBk settings
- SMS-confirmation
- 0000 to enter Settings
- SMS menu
- Master reset

### Sound & alert

- Ring tone
- Alarm melody
- Ringer volume
- Silent/Sleep mode
- Meeting/Theater mode
- Maximum/Bus mode
- Increasing ring
- Vibra for call
- Vibra for alarm
- Key tones
- SMS Message alert
- Handset volume
- Handsfree volume
- Voice announcement

### Display & light

- Display light
- Display contrast
- Keypad light

### Time & date

- Set time
- Time format
- Set date
- Date format

### Tools

- Birthday reminder
- Emergency button on/off
- Bluetooth
- Calculator
- Calendar
- Position
- FM - Radio
- SIM-Service

### Position

- Position on/off
- My position
- View GPS Signal
- Show friend list
- Home position
- Pos. Settings

### Birthday reminder

- New birthday
- Edit birthday
- Delete birthday

## 9. APPENDIX

### Safety instructions

- Switch off the mobile phone in hospitals or in the vicinity of medical equipment, as the mobile phone may cause them to malfunction. If you need medical devices and aids, agree how to use the phone with your doctor.
- Keep your mobile phone a minimum distance of 20 cm away from pacemakers, if it is turned on. Never keep the phone in your chest pocket. Hold the mobile phone to the ear furthest from the pacemaker. If you suspect any interference with the pacemaker, turn off the mobile phone immediately.
- The mobile phone transmits radio waves during operation and creates high-frequency electromagnetic fields. When using the phone close to your body make sure you keep it at a distance of approx. 1.5 cm from the body, in order to avoid overexposure. If you have concerns about the use of the telephone, reduce your conversation time and use handsfree sets and headsets.
- Never drive a car while holding the mobile phone in your hand. Observe national law and traffic regulations governing the use of mobile phones in traffic.
- Always turn off your mobile phone inside an airplane.
- You must switch off the mobile phone in the vicinity of petrol stations and other places with explosive materials, such as chemical plants, fuel systems and explosive areas, as sensitive equipment may be affected or an explosion or fire may be caused
- Never shine the LED flashlight into the eyes of people or animals
- Mobile phones may cause interference in TV sets or radios, particularly when the handset is used close to such a device.
- If the speaker or headset is set to a high volume this can cause hearing damage.
- The device and its accessories may contain small parts.  
Keep this product out of reach of small children.
- As a precaution, we recommend disconnecting the charger from the phone during a thunderstorm.
- The use of network services (e.g. emergency SMS) may incur charges.



## Warranty

The 12 month warranty period (6 month for battery) begins with the delivery of the device. Verify the delivery date with the **original receipt** (invoice, cash receipt) with **IMEI number**. Store these documents carefully. The extent of our warranty is based on the warranty conditions in effect at the time of delivery. The warranty is only valid if original emporia batteries were used.

To the greatest possible extent under current law **emporia** will not be liable under any circumstances for the following situations:

- Any loss of data or income
- Any particular or incidental damages, as well as any consequential or collateral damages, in whatever way these might have been caused.

## Correct usage

This mobile phone is robust and designed for mobile operation.

However, it must be protected from moisture (rain, bath,...) and impact.

Do not expose it to direct sunlight.

Any utilization other than described above will cause damage to the device, and may be hazardous (electric shock, fire, etc.). The entire product must not be altered or rebuilt, and the housing must not be opened.

- The power plug is suitable only for use with residential-type outlets of the public mains with 230 Volt/ 50 Hz (10/16A) alternating current.
- Always store batteries out of reach of children.
- Never attempt to remove the cover of battery packs, to cut, open, break, bend, or pierce batteries, or to destroy them in any other way.
- Never use damaged chargers or batteries
- Use only emporia-approved accessories and batteries.

## Disposal

- Disposal of packaging: Packaging and packaging materials are recyclable and should always be returned.
- Disposal of batteries: Batteries must not be disposed of with domestic rubbish! As a consumer you are required by law to recycle used batteries. You may return the to your local collection point or to the dealer.
- Disposal of the device: Do not throw your mobile phone into the garbage, once it has outlived its usefulness. For the benefit of the environment, take it to a recycling location for used phones so it can be processed in an environmentally responsible way.



## Technical product description

- Hearing aid compatible loudspeaker
- Dualband GSM 900/1800
- Internal antenna, SAR 0,214 W/kg
- Dimensions: 109x 50x 17 mm, 92 g
- Display: 1.8" TFT 160x 128 Pixel
- Operating temperature: 0-40°C
- Battery AK-V36 (1.0 & 2.0): Li-Ion 3,7V/ 1100 mAh
- Flashlight – Protection class 3
- Stand-by-time: GSM (Bluetooth off) up to 260 h,  
GSM & Bluetooth (paired) up to 100 h
- Talk time: GSM (Bluetooth off) up to 180 min.  
GSM & Bluetooth (paired) up to 140 min
- Charger RL -V170UK: In 100-240V ~ Out 5,0V --- 550 mA

## EG – Declaration of conformity

We, Emporia Telecom Produktions- und Vertriebs- GmbH & Co. KG. declare under our sole responsibility that the following product is in conformity with the following relevant harmonised standards.

**Kind of Product: Dual Band Mobile Phone**

**Article number: V38**

### Governing EU-regulations:

Council Directive R&TTE 1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

# CE 2200

### The product complies with the following harmonized EN standards:

Safety: EN 60950-1:2006 +A 12:2011

EN 50332-1:2000

Health: EN 50360:2001;

EN 62209-1:2006

EMC: EN 301 489-1 V1.8.1;

EN 301 489-17 V2.1.1

EN 55013 2001 A2:2006;

EN 301 489-7 V1.3.1

EN 301 489-19 V1.2.1;

EN 55020 2007

Radio Spectrum: EN 300 328 V1.7.1;

EN 300 440-1 V1.6.1

EN 300 440-2 V1.4.1;

EN 301 511 V9.0.2

Eveline Pupeter  
General Manager



emporia

01.06.2012, Linz/Austria

Emporia Telecom Produktions-  
und Vertriebs-GmbH & CoKG

Industriezeile 36  
4020 Linz, Austria

fon +43.732.77 77 17-0

fax +43.732.77 77 17-8

[www.emporia.at](http://www.emporia.at)

Emporia Telecom Hotline:

Deutschland: 0 180·59 13 181

Österreich: 0 732·77 77 17·446

Schweiz: 08484·50004

**CE 2200**